


# Installation Instructions

## STANDARD WALL MOUNTING CLIPS

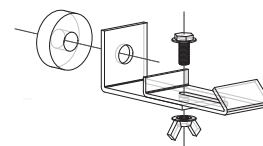

CLIP 5132R

### Step 1:

Using a level, temporarily hold the panel in place and mark the corner location on the wall.

### Step 2:

Holding the mounting clips at the desired location on the panel, measure the exact distance of the screw holes to the corners. Using your corner marks from step #1, carry over the new dimensions and reference the screw hole locations on your wall.

### Step 3:

Depending on the substrate, pre-drill holes for mounting clips. For concrete and masonry walls, set expansion anchors, and then mount clips to wall. Anchors should have a 550lb. Min. pull-out value.

### Step 4:

Hang the Greenscreen® panel on the clips.

### Step 5:


Repeat steps 1-4 as needed. Pre-installing all clips is not recommended due to panel growth. Panel sizes are nominal - Actual panel size may vary  $\pm 1/8"$  in width and length. Add  $\pm 1/16"$  Per edge of trim.

### Step 6:


Refer to Greenscreen® "vine planting detail" for vine attachment and planting guidelines.

### Recommendations:

- Mounting panels 6" above finished grade, or per shop drawings.
- On stucco walls, adjust clip locations so that all clips screw directly into framing members of the wall.
- Wear gloves when handling greenscreen® panels.
- Greenscreen® does not recommend cutting panels in the field. If it is necessary, however, use touch-up paint.

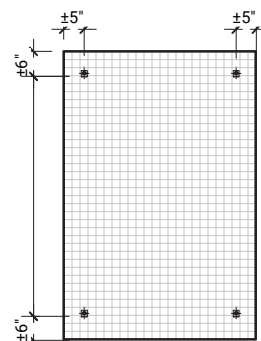

4'x6' panel

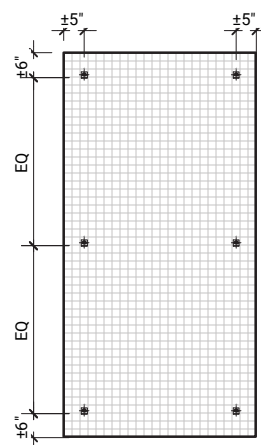

4'x8' panel