

Planter Scoop Connection Instruction




This instruction is a guide for using the scoop connection kits. This kit is to be use when like size planters are to be bolted together. The planters illustrated in these instructions are solely for visual reference and do not necessarily reflect the style of planters for your installation. Consult with your contractor to verify any site specific conditions.

Kit #	Planter Width	Qty Washer	Qty Bolt	Qty Nut
SCP-K18	12" to 18"	10	5	5
SCP-K24	18" to 24"	12	6	6
SCP-K36	24" to 36"	16	8	8
SCP-K48	36" to 48"	20	10	10

TOOLS		
• Drill	• Tape measure	• Clamps
• 7/16" dia drill bit	• Silicone	• Sandpaper

STEPS

1. Clean mating surfaces of each planter with water to remove dust.
2. Align planters.
3. Mark holes as shown:

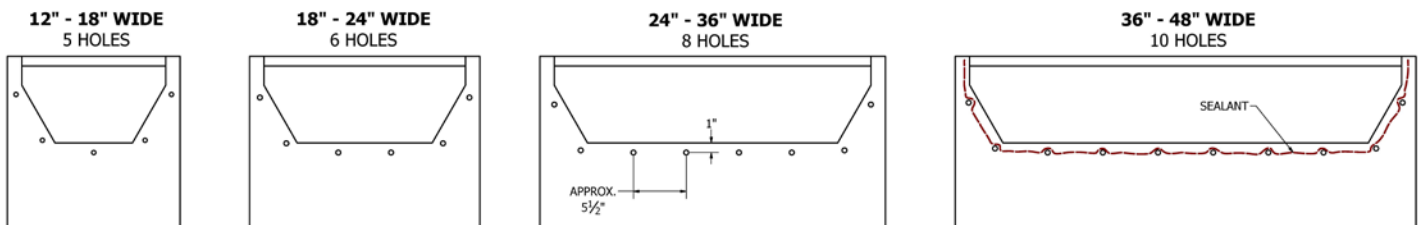

4. Clamp planters together.
5. Drill holes.
6. Use sandpaper to remove glass fibers and clean up edge of the holes
7. Separate planters and apply sealant on mating faces and along perimeter of each scoop out (see above).
8. Realign planters and bolt together (seal around each bolt).


Tournesol Siteworks, LLC
Successful sites start here™

2930 Faber Street, Union City, CA 94587

ph: 800.542.2282 f: 510.471.6243

www.tournesolsiteworks.com

48-00590-00, Rev. C

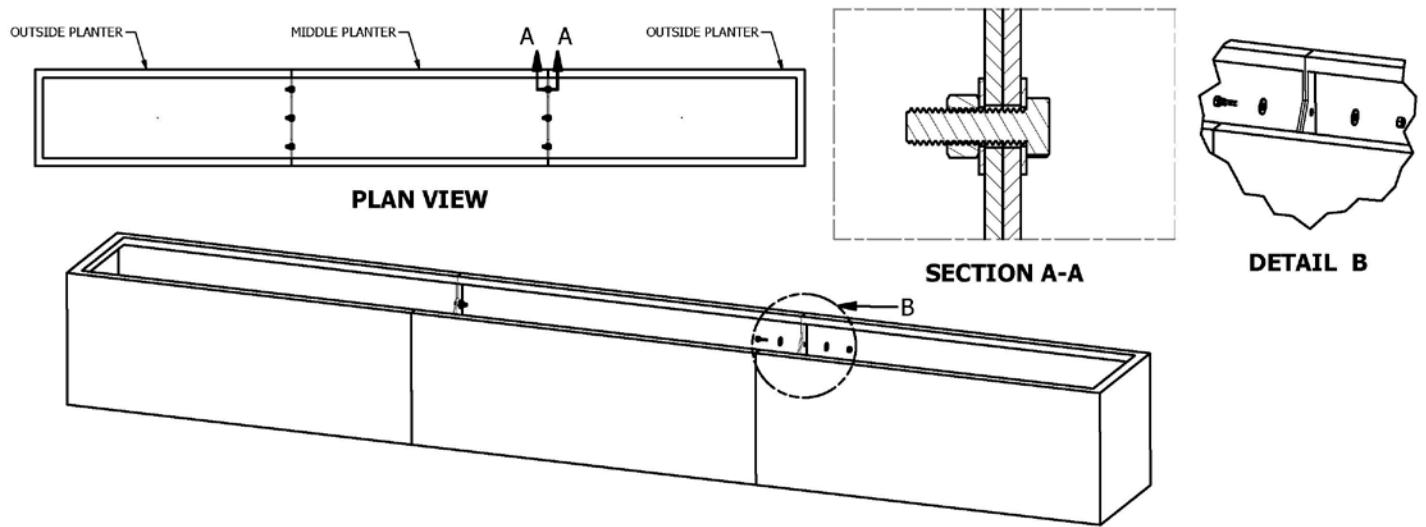

Tournesol Siteworks, LLC

Successful sites start here™

2930 Faber Street, Union City, CA 94587

ph: 800.542.2282 f: 510.471.6243

www.tournesolsiteworks.com

48-00590-00, Rev. C